


Connecting the Scanner and Y/N Keypad to the Laptop

Step 1

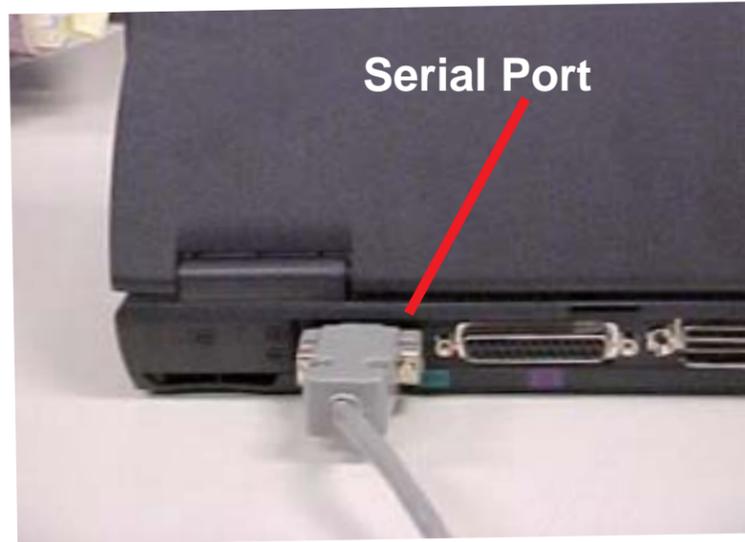

Serial Port

Connect the scanner cable to the back of the laptop's serial port



Scanner Cable

Step 2



Connect the other end of the scanner cable to the back of the scanner

Step 3


Scanner A/C Adapter



Plug the small round end of the adapter into the back of the scanner, as shown. Plug in the other end of the A/C adapter into the electrical power strip.




Step 4

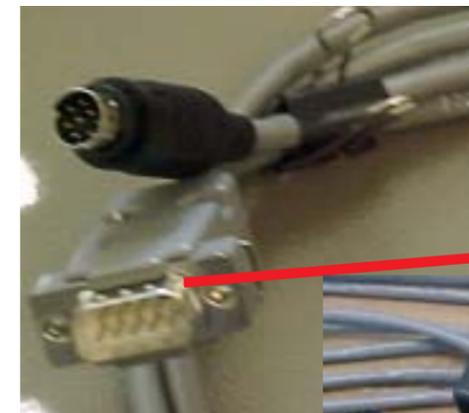

Keypad cable



Keypad AC Adapter

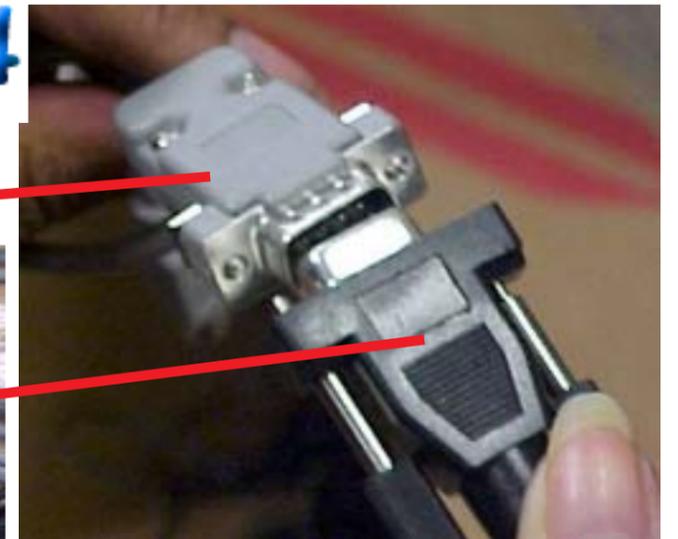

Connect the female end of the AC adapter keypad to the male end of the keypad cable as shown above.

Step 5



Connect the small, round end of the keypad cable to the scanner, as shown above.



Connect the keypad A/C adapter into the electric power strip (power outlet).

Step 6



Connect the phone line connector into the back of the keypad.



Enable the Y/N keypad

The Y/N keypad allows the check writer at the POS to verify the dollar amount of the check and choose Yes or No to that amount. Before your POS system can use the Y/N keypad, it needs to be enabled within the POS software. Follow these steps:

1. Sign on to the PCCPOS software
2. Choose File, Configuration
3. Click on the 'Application' tab
4. The right side of the window displays a checkbox with 'Enable keypad' to the right. Click the box to insert a check mark. This will enable the Y/N keypad.